


ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

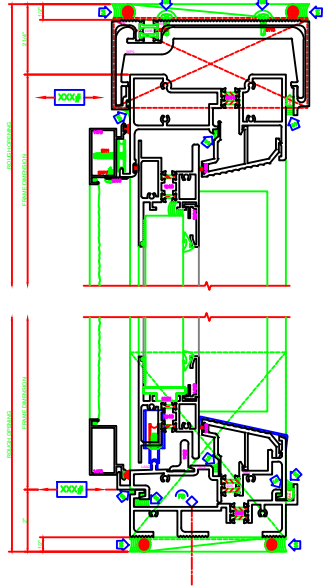

ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR-CUST.G.C.NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.

ERECTOR-CUST.G.C.NOTE:
 VERIFY THAT THE SILL IS CORRECTLY
 INSTALLED TO AVOID A WEATHER SEAL
 FAILURE.