
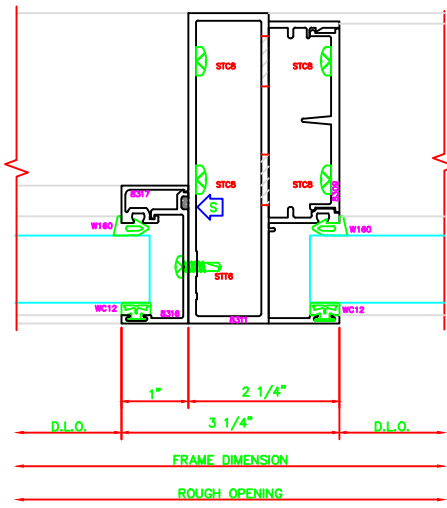


804	LEFT TRANSOM JAMB
	945

805	RIGHT TRANSOM JAMB
	945

ERASE NOTE:

GASKETS SHOWN ARE FOR INTERIOR GLAZE.

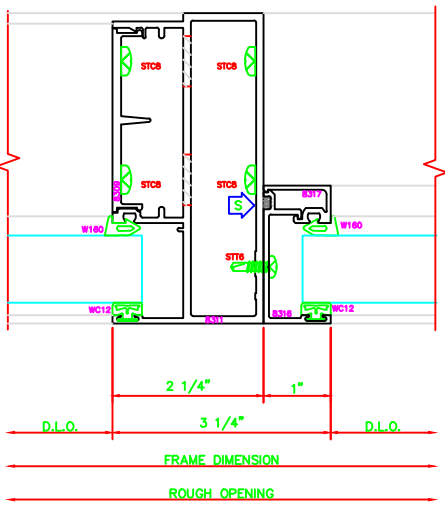

802	LEFT DOOR JAMB
	945




803	RIGHT DOOR JAMB
	945

ERASE NOTE:

GASKETS SHOWN ARE FOR INTERIOR GLAZE. OUTSWING JAMB FOR OFFSET PIVOTS. BUTT HINGES AS SHOWN. CONTINUOUS HINGE REQUIRES 4437/9155/STT6/W138

ERASE NOTE:

GASKETS SHOWN ARE FOR INTERIOR GLAZE. OUTSWING JAMB FOR OFFSET PIVOTS. BUTT HINGES AS SHOWN. CONTINUOUS HINGE REQUIRES 4437/9155/STT6/W138

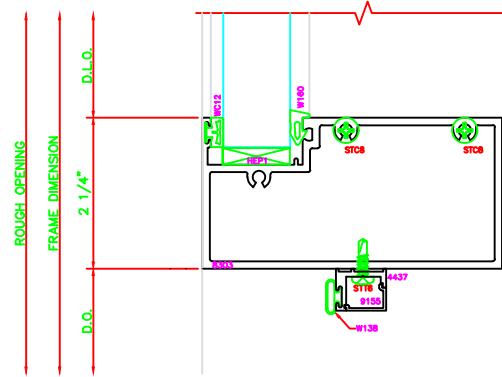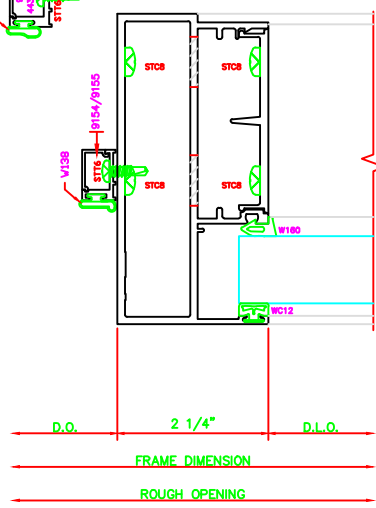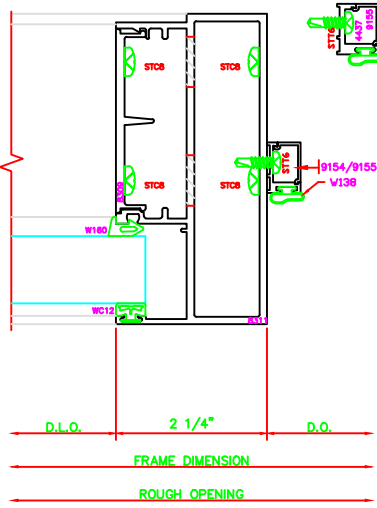

801	DOOR HEADER
	945

ERASE NOTE:

GASKETS SHOWN ARE FOR INTERIOR GLAZE. OUTSIDE DOOR HEAD FOR SURFACE CLOSERS.